

12. MAINTENANCE SCHEDULE

This maintenance schedule is based upon average riding conditions. Machines subjected to severe use, or ridden in unusually dusty areas, require more frequent servicing.	INITIAL SERVICE PERIOD	REGULAR SERVICE PERIOD Perform at every indicated month or mileage interval, whichever occurs first.			
	500 miles	1 month 500 miles	3 months 1,500 miles	6 months 3,000 miles	12 months 6,000 miles
ENGINE OIL—Change	●		○		
OIL FILTER ELEMENT—Replace	●			○	
OIL FILTER SCREEN—Clean					○
SPARK PLUGS —Clean and adjust gap or replace if necessary.				○	
*CONTACT POINTS AND IGNITION TIMING —Clean, check, and adjust or replace if necessary.	●			○	
*VALVE TAPPET CLEARANCE —Check, and adjust if necessary.	●			○	
*CAM CHAIN TENSION—Adjust	●			○	
PAPER AIR FILTER ELEMENT AND POLYURETHAN FOAM ELEMENT—Clean		(Service more frequently if operated in dusty areas)		○	
PAPER AIR FILTER ELEMENT—Replace					○
*CARBURETORS—Check, and adjust if necessary.	●			○	
THROTTLE OPERATION —Inspect cables. Check, and adjust free play.	●			○	
FUEL FILTER SCREEN—Clean				○	
FUEL LINES—Check				○	
*CLUTCH—Check operation, and adjust if necessary.	●			○	
DRIVE CHAIN —Check, lubricate, and adjust if necessary.	**●	○			
BRAKE FLUID LEVEL —Check, and add fluid if necessary.	●			○	
*BRAKE SHOES/PADS —Inspect, and replace if worn.				○	
BRAKE CONTROL LINKAGE —Check linkage, and adjust free play if necessary.	●			○	
*WHEEL RIMS AND SPOKES—Check. Tighten spokes and true wheels, if necessary.	●			○	
TIRES—Inspect and check air pressure.	●	○			
FRONT FORK OIL—Drain and refill.	***●				○
FRONT AND REAR SUSPENSION —Check operation.	●			○	
REAR FORK BUSHING —Grease, check for excessive looseness.				○	
*STEERING HEAD BEARING—Adjust					○
BATTERY—Check electrolyte level, and add water if necessary.	●		○		
LIGHTING EQUIPMENT —Check and adjust if necessary.	●	○			
ALL NUTS, BOLTS, AND OTHER FASTENERS —Check security and tighten if necessary.	●	○			

Items marked * should be serviced by an authorized Honda dealer, unless the owner has proper tools and is mechanically proficient. Other maintenance items are simple to perform and may be serviced by the owner.

** INITIAL SERVICE PERIOD 200 MILES

*** INITIAL SERVICE PERIOD 1,500 MILES