

'77


*42 QTS
PLUG GAP
POINTS*

*VALVE
DIA*



HONDA MODEL CB750A

OWNER'S MANUAL

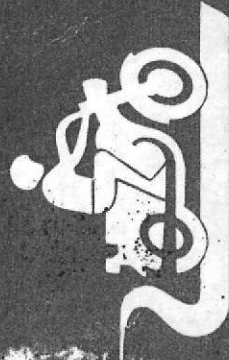

© HONDA MOTOR CO., LTD. 1976

IMPORTANT NOTICE

- **OPERATOR AND PASSENGER.**

This motorcycle is designed and constructed to carry the operator and one passenger. However, do not exceed the vehicle capacity load limit shown on the tire information label.

- **ON-ROAD USE**

This motorcycle is not equipped with a spark arrestor and is designed and constructed to be used only on the road. Operation, in forest covered, bush covered, or grass covered areas may not be legal. Check local laws and regulations before riding in these areas.

- **READ OWNER'S MANUAL CAREFULLY BEFORE OPERATING THIS MOTORCYCLE.**

The HONDAMATIC transmission requires special techniques for safe operation.

All information, illustrations, directions and specifications included in this publication are based on the latest product information available at the time of approval for printing. HONDA MOTOR CO., LTD. reserves the right to make changes at any time without notice and without incurring any obligation whatever.

No part of this publication may be reproduced without written permission.